




## SIZE SPECIFICATIONS:

THIS INSTRUCTION SHEET IS APPLICABLE FOR SQUARE HANGING SIGN.

## FRAME ASSEMBLY

### STEP 1: BOTTOM SECTION




**PARTS REQUIRED:**  (No Hanging Points) x4  
 x4  
 x4

- ▶ Follow the number sequence
- ▶ Start building the bottom section by connecting parts together


### STEP 2:






**PARTS REQUIRED:**  x4  
 x4  
 ▶ Connect the uprights to bottom section

### STEP 3: TOP SECTION AND FRAME

**PARTS REQUIRED:**  (With Hanging Points) x4  
 x4  
 x4



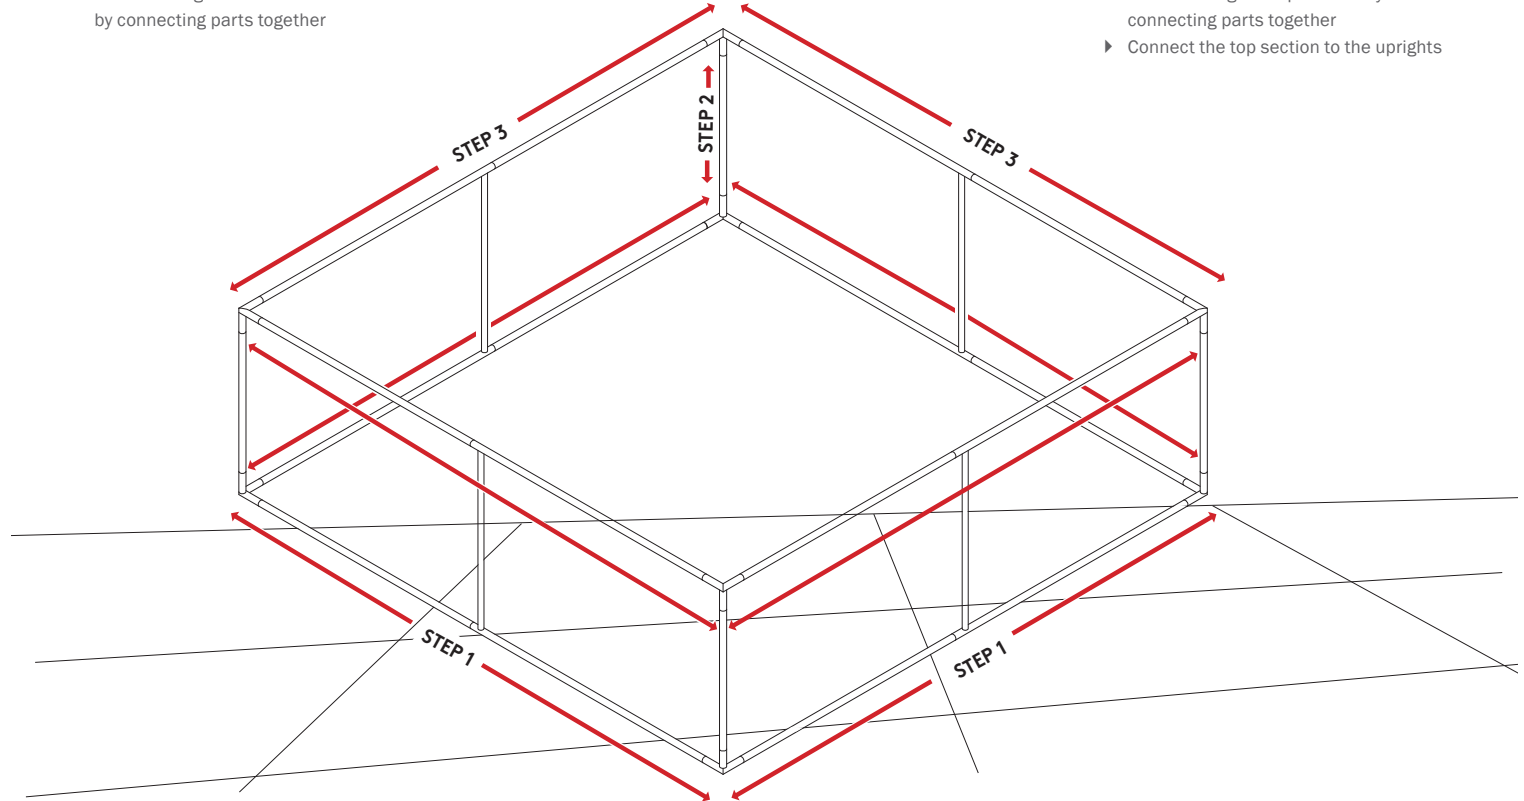
- ▶ Follow the number sequence
- ▶ Start building the top section by connecting parts together
- ▶ Connect the top section to the uprights



PARTS	QTY
 4 PCS. WITH HANGING POINTS	8
	8
	8
UPRIGHTS	
	4
	4

## FABRIC INSTALLATION

- ▶ Make sure work area is clean of dirt and other materials that might damage or dirty the fabric. Use a drop cloth if possible & never use newsprint
- ▶ Put unzip fabric on the floor and open up the fabric.
- ▶ Put frame on top of fabric, make sure to match the button holes to the hanging points
- ▶ Pull the outside and inside fabric up and close zippers

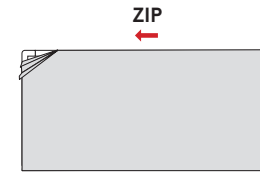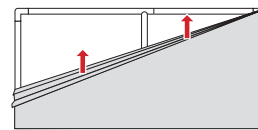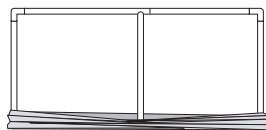

This document contains proprietary information. No portion may be disclosed to other, reproduced or used in any way without our written authorization.

©2018 McRae Imaging Inc.