

SIZE SPECIFICATIONS:


228.75"W x 88"H











FRONT VIEW



SIDE VIEW



ISOMETRIC VIEW

PARTS	CODE	QTY
	TC1	2
	TC3	1
	S2	14
	S3	7
	S4	4
	BC4	1
	BC1	2
	B1	2

This document contains proprietary information. No portion may be disclosed to other, reproduced or used in any way without our written authorization.

©2018 McRae Imaging Inc.

FRAME ASSEMBLY

STEP 1: LOWER SECTION

PARTS REQUIRED: 2-BC1, 2-B1, 4-S2, 2-S3, 2-S4, 1-BC4

- ▶ Attach the base B1 to part BC1 by using the locking pin
- ▶ Follow the number sequence
- ▶ Connect S4 to BC1
- ▶ Connect S2 to S4
- ▶ Connect S3 to S2
- ▶ Connect S2 to S3
- ▶ Connect BC4 S2
- ▶ Connect S4 to BC4
- ▶ Connect S2 to S4
- ▶ Connect S3 to S2
- ▶ Connect S2 to S3
- ▶ Connect BC1 with Base to S2

STEP 2:


PARTS REQUIRED: 3-S2, 3-S3

- ▶ Take Lower Section from STEP 1
- ▶ Follow the number sequence
- ▶ Connect S2 to BC1
- ▶ Connect S3 to S2
- ▶ Repeat to complete other side
- ▶ Connect S2 to BC4
- ▶ Connect S3 to S2

STEP 3:




PARTS REQUIRED: 2-TC1, 4-S2, 2-S3, 2-S4, 1-TC3

- ▶ Follow the number sequence
- ▶ Connect S2 to TC1
- ▶ Connect TC1 to S4
- ▶ Connect S2 to S4
- ▶ Connect S3 to S2
- ▶ Connect S2 to S3
- ▶ Connect TC3 to S2
- ▶ Connect S2 to TC3
- ▶ Connect S2 to TC3
- ▶ Connect TC3 to S4
- ▶ Connect S2 to S4
- ▶ Connect S3 to S2
- ▶ Connect S2 to S3
- ▶ Connect TC1 to S2
- ▶ Attach the completed upper section to the lower section to complete the frame

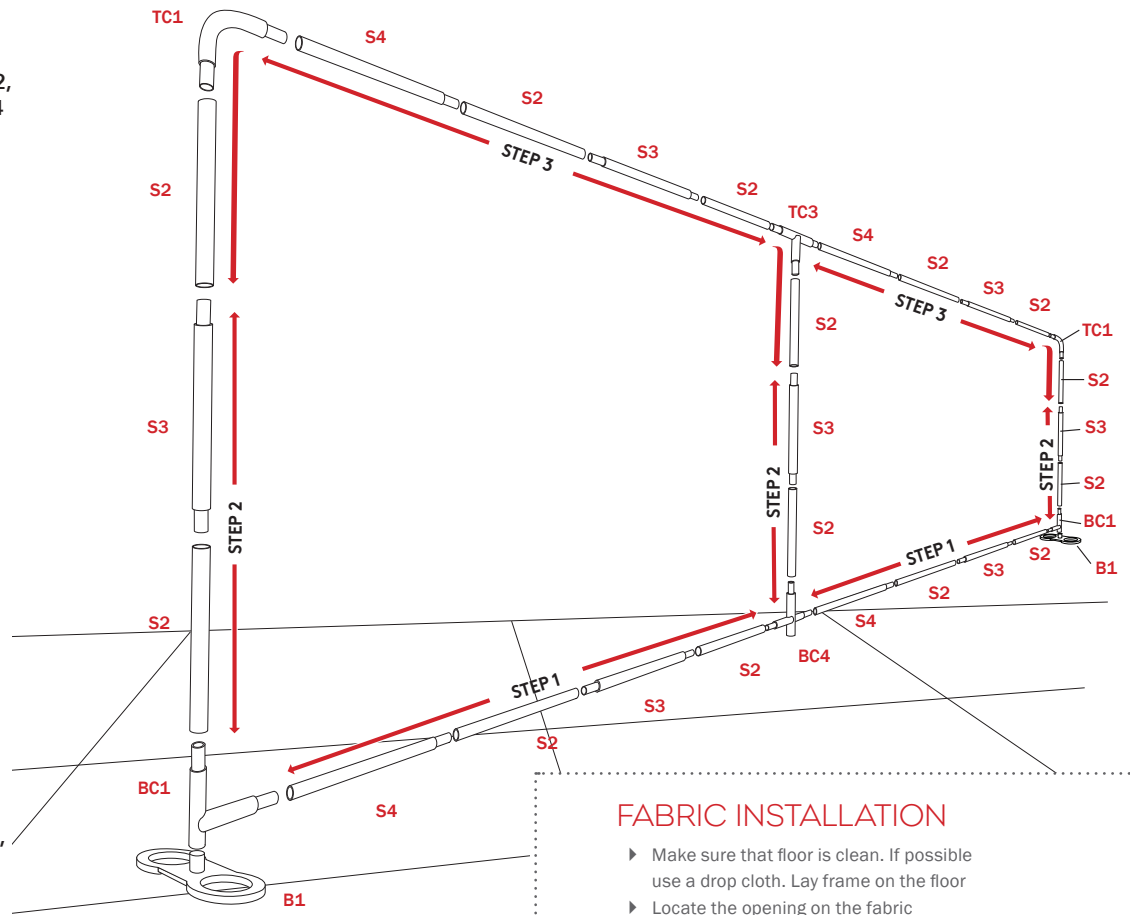

FABRIC INSTALLATION

- ▶ Make sure that floor is clean. If possible use a drop cloth. Lay frame on the floor
- ▶ Locate the opening on the fabric
- ▶ Make sure that zipper is open
- ▶ Drape fabric like a pillow cover to the frame starting at the top
- ▶ Pull the fabric part way down and stand frame up
- ▶ Pull fabric completely down and close zipper

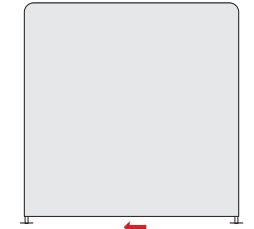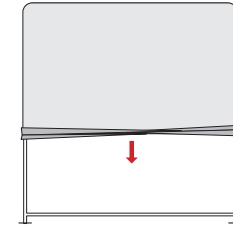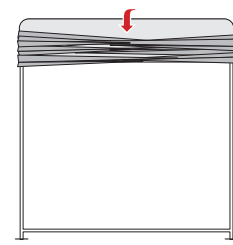

ZIP