

## DESCRIPTION:

80" H x 60" W



FRONT VIEW



SIDE VIEW



ISOMETRIC VIEW

PARTS	CODE	QTY
-------	------	-----

	TC	8
	SC	8
	CS	4
	SC	8
	SC	8

## FRAME ASSEMBLY

### STEP 1: FRONT VIEW

PARTS REQUIRED: SC1, SC091, CS1, SC1, SC1

- 1. Place the side (SC1) on the SC091
- 2. Loosen and remove the top screws
- 3. Follow the number sequence
- 4. Connect SC1 to SC1
- 5. Connect SC1 to SC1
- 6. Connect SC1 to SC1
- 7. Connect SC1 with SC1 to SC1

### STEP 2


PARTS REQUIRED: SC1, SC1, SC1

- 1. Place side (SC1) on SC1 (SC1)
- 2. Follow the number sequence
- 3. Connect SC1 to SC1
- 4. Connect SC1 to SC1
- 5. Place it in complete frame

### STEP 3

PARTS REQUIRED: SC1, SC1, SC1, SC1

- 1. Follow the number sequence
- 2. Connect SC1 to SC1
- 3. Connect SC1 to SC1
- 4. Connect SC1 to SC1
- 5. Connect SC1 to SC1
- 6. Connect SC1 to SC1
- 7. Place the complete side design to the base section to complete the frame

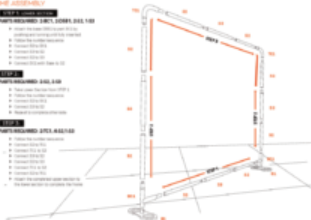

## FABRIC INSTALLATION

- 1. Slide back the fabric in order to install the side panel. Lay frame on the floor
- 2. Lay out the side panel on the floor
- 3. Slide back the fabric in order
- 4. Slide fabric into a corner hole on the frame
- 5. Repeat on the top
- 6. Pull the fabric over the side and bottom frame rail
- 7. Pull fabric completely down and close zipper



Be cautious of the following:  
 • Do not use the fabric for anything other than the intended use.  
 • Do not use the fabric for anything other than the intended use.

© 2014 Milan Group Inc.