
## MCRAE Assembly Sheet

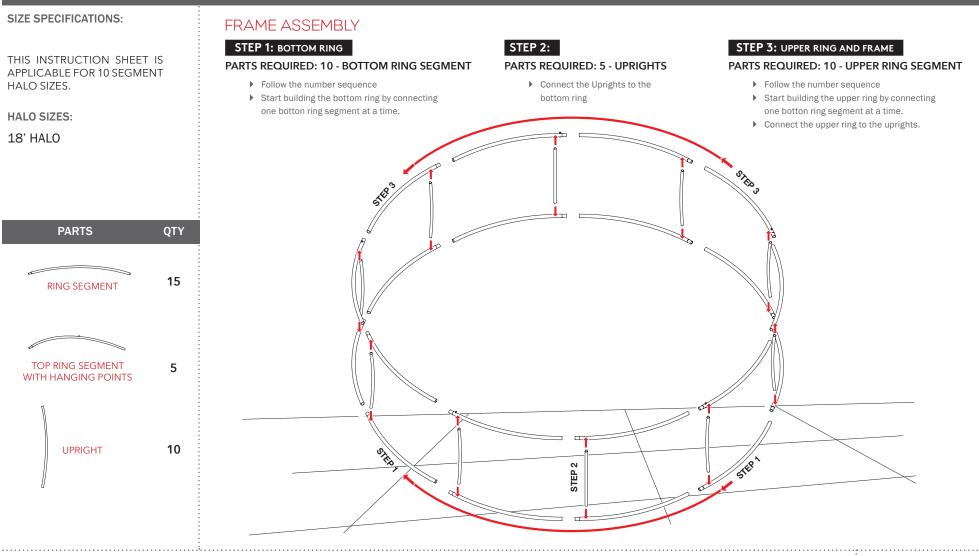

## FABRIC INSTALLATION

- Make sure work area is clean of dirt and other materials that might damage or dirty the fabric. Use a drop cloth if possible & never use newsprint
- Put unzip fabric on the floor and open up the fabric.
- Put frame on top of fabric, make sure to match the button holes to the hanging points
- Pull the outside and inside fabric up and close zippers

ZIP information. No portion may be disclosed to or used in any way without our written authorization.

©2018 McRae Imaging Inc.

This document contains proprietary