

GENERAL INFORMATION

THIS INSTRUCTION SHEET IS APPLICABLE FOR 4 SECTORS (90° EACH).

TOOLS NEEDED

• HAND

FRAME ASSEMBLY

STEP 1: TOP RAILS

PARTS REQUIRED: 4 - TOP RAIL BRACKETS

1. Fit the top rail brackets
2. Tighten/loosen the screws as needed to adjust the angle

STEP 2


PARTS REQUIRED: 4 - COLUMNS

1. Connect the columns to the brackets

STEP 3: BOTTOM RAILS

PARTS REQUIRED: 4 - BOTTOM RAIL BRACKETS

1. Fit the bottom rail brackets
2. Tighten/loosen the screws as needed to adjust the angle of the rail
3. Connect the rail to the columns

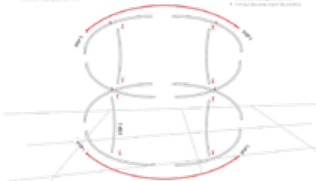

PARTS	QTY
-------	-----



4



4



4

FABRIC INSTALLATION

1. Unroll the fabric onto the top rail and the bottom rail
2. The fabric should be 100% flat on the rails. There should be no wrinkles or folds in the fabric
3. The top rail should be 100% flat on the top rail
4. The bottom rail should be 100% flat on the bottom rail
5. The fabric should be 100% flat on the rails



For more information, please contact us at info@mcracorp.com or call us at 1-800-850-8500.

MCRACORP.COM