

REQUIREMENTS:

THIS STRUCTURE MUST BE INSTALLED ON A SURFACE CAPABLE OF SUPPORTING THE WEIGHT.

TOOLS NEEDED:

- 10' WALK BEYOND

FRAME ASSEMBLY

STEP 1: BOTTOM RING

PARTS REQUIRED & BOTTOM RING LOCATION

- 1x16 (16) TO BE ATTACHED
- 1x4 (16) TO BE USED FOR BRACING AND TO BE ATTACHED TO THE 1x16

STEP 2:


PARTS REQUIRED & UPRIGHTS

- 1x4 (16) TO BE USED FOR THE UPRIGHTS

STEP 3: UPPER RING

PARTS REQUIRED & UPPER RING LOCATION

- 1x16 (16) TO BE ATTACHED
- 1x4 (16) TO BE USED FOR BRACING AND TO BE ATTACHED TO THE 1x16
- 1x4 (16) TO BE USED FOR BRACING AND TO BE ATTACHED TO THE 1x16

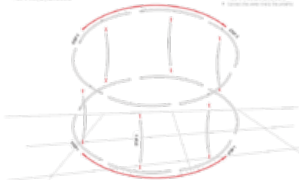

PARTS	QTY
-------	-----



FABRIC INSTALLATION

1. FABRIC IS TO BE INSTALLED ON THE INSIDE OF THE STRUCTURE.
2. THE FABRIC IS TO BE INSTALLED ON THE INSIDE OF THE STRUCTURE.
3. THE FABRIC IS TO BE INSTALLED ON THE INSIDE OF THE STRUCTURE.
4. THE FABRIC IS TO BE INSTALLED ON THE INSIDE OF THE STRUCTURE.



© 2014 MCRAE
 ALL RIGHTS RESERVED
 MCRAE.COM
 1-800-854-8544

MCRAE.COM