

SIZE SPECIFICATIONS:

115"W x 97.5"H



FRONT VIEW



SIDE VIEW



ISOMETRIC VIEW

PARTS	CODE	QTY
	TC1	4
	S2	4
	S3	2
	S4	2
	C1	4
	C2	2
	BC4	2
	B1	2

FRAME ASSEMBLY

STEP 1: BOTTOM SECTION

PARTS REQUIRED: 2-TC1, 2-BC4, 2-B1, 2-S2, 1-S3, 1-S4

- ▶ Attach the base B1 to part BC4 by using the locking pin
- ▶ Follow the number sequence
- ▶ Connect corner TC1 to BC4
- ▶ Connect S2 to TC1
- ▶ Connect S3 to S2
- ▶ Connect S4 to S3
- ▶ Connect S2 to S4
- ▶ Connect TC1 to S2
- ▶ Connect BC4 with Base to TC1

STEP 2:


PARTS REQUIRED: 2-C1, 2-C2

- ▶ Take Bottom Section from STEP 1
- ▶ Follow the number sequence
- ▶ Connect C1 to BC4
- ▶ Connect C2 to C1
- ▶ Repeat to complete other side

STEP 3:




PARTS REQUIRED: 2-TC1, 1-TC2, 2-C2, 2-C1, 3-S2

- ▶ Follow the number sequence
- ▶ Connect C1 to C2
- ▶ Connect TC1 to C2
- ▶ Connect S2 to TC1
- ▶ Connect S3 to S2
- ▶ Connect S4 to S3
- ▶ Connect S2 to S4
- ▶ Connect TC1 to S2
- ▶ Connect C1 to TC1
- ▶ Connect C1 to C2
- ▶ Attach the completed upper section to the lower section to complete the frame

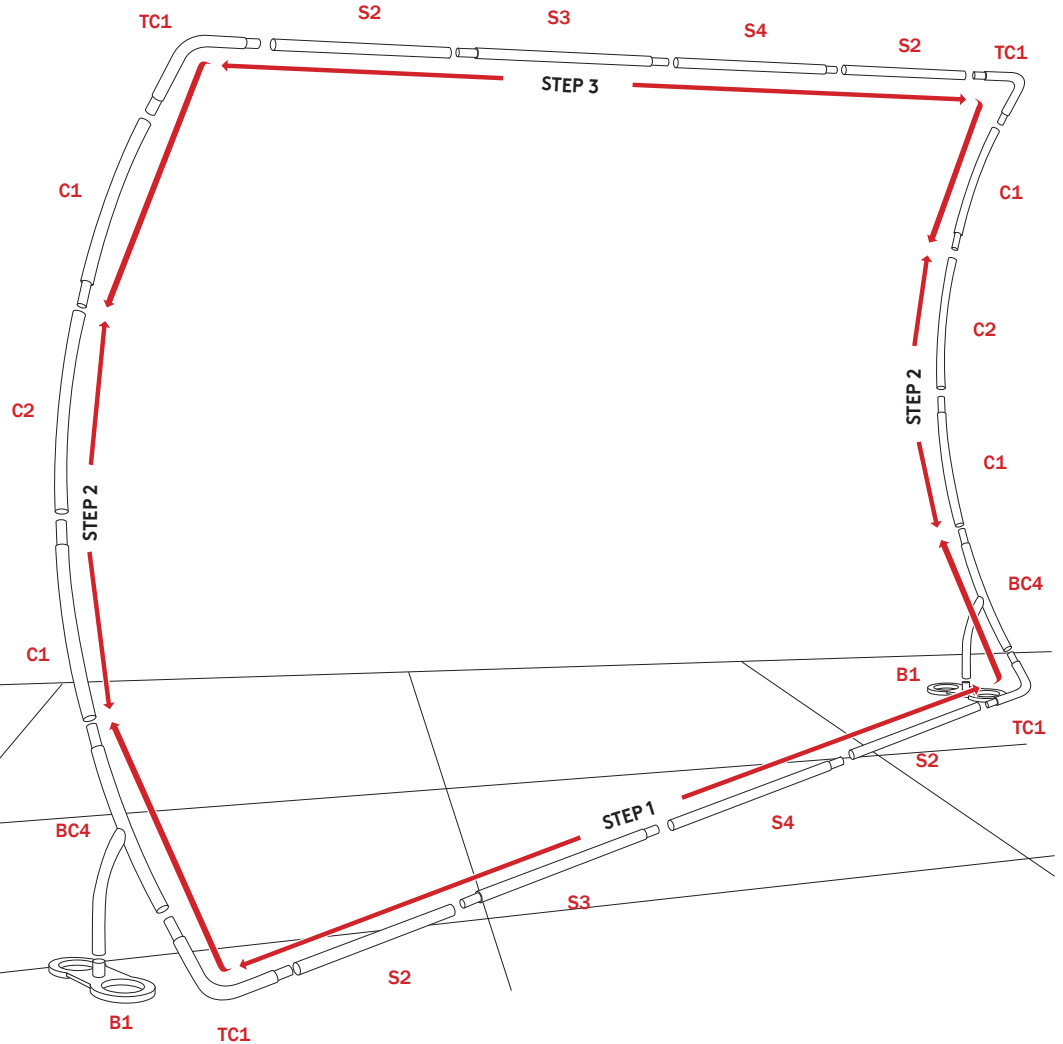

FABRIC INSTALLATION

- ▶ Make sure that floor is clean. If possible use a drop cloth. Lay frame on the floor
- ▶ Locate the opening on the fabric
- ▶ Make sure that zipper is open
- ▶ Drape fabric like a pillow cover to the frame starting at the top
- ▶ Pull the fabric part way down and stand frame up
- ▶ Pull fabric completely down and close zipper

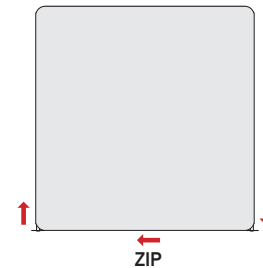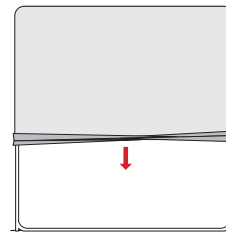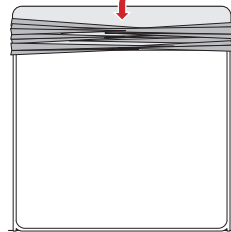

This document contains proprietary information. No portion may be disclosed to other, reproduced or used in any way without our written authorization.

©2018 McRae Imaging Inc.