

DESCRIPTION:

227" W x 472" H

TECHNICAL SHEET

AVAILABLE FOR LEFT
OR RIGHT HAND INSTALLATION



FRONT VIEW



SIDE VIEW



TECHNICAL VIEW

| PARTS | CODE | QTY |
|-------|------|-----|
|-------|------|-----|

| | | |
|--|-----|---|
| | W03 | 4 |
|--|-----|---|

| | | |
|--|-----|---|
| | W04 | 8 |
|--|-----|---|

| | | |
|--|-----|---|
| | W05 | 8 |
|--|-----|---|

| | | |
|--|-----|---|
| | W06 | 8 |
|--|-----|---|

| | | |
|--|-----|---|
| | W07 | 8 |
|--|-----|---|

| | | |
|--|-----|---|
| | W08 | 8 |
|--|-----|---|

FRAME ASSEMBLY

STEP 1: ASSEMBLY

PARTS REQUIRED: PARTS 1, 4, 6, 8

- Connect W01 to W02 on both sides

STEP 2


PARTS REQUIRED: PARTS 2, 3, 5, 7, 9, 10

- Add W03 (W04) on both sides
- Connect W05 to W06 on both sides
- Connect W07 to W08 on both sides
- Connect W09 to W10 to both sides

STEP 3

PARTS REQUIRED: PARTS 1, 4, 6, 8

- Insert W01 into bottom seat hole
- Insert W02 into bottom seat hole on the other side to complete the frame

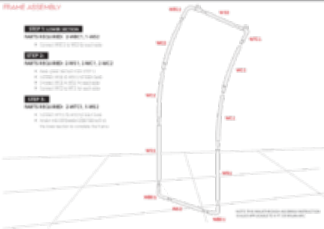

FABRIC INSTALLATION

1. Place the fabric on the chair frame.
2. Pull the fabric up to the top of the seat.
3. Use the tensioning system to adjust the fabric.
4. Tighten the fabric to the desired tension.
5. Use the tensioning system to adjust the fabric.
6. Tighten the fabric to the desired tension.
7. Use the tensioning system to adjust the fabric.

