


SIZE SPECIFICATIONS:  
114"W x 88"H



FRONT VIEW



SIDE VIEW



ISOMETRIC VIEW

PARTS	CODE	QTY
	TC1	2
	TC2	1
	S2	6
	S3	3
	C5	4
	C2	4
	BC2	1
	BC1	2
	B1	2

## FRAME ASSEMBLY

### STEP 1: LOWER SECTION

**PARTS REQUIRED:**  
2-BC1, 2-D5B1, 2-C1, 2-C3, 1-BC2

- ▶ Attach the base B1 to part BC1 by pushing and turning until fully inserted
- ▶ Follow the number sequence
- ▶ Connect C1 to BC1
- ▶ Connect C3 to C1
- ▶ Connect BC3 to C3
- ▶ Connect C3 to BC2
- ▶ Connect C1 to C3
- ▶ Connect BC1 with Base to C1

### STEP 2:


**PARTS REQUIRED:** 3-S2, 3-S3

- ▶ Take Lower Section from STEP 1
- ▶ Follow the number sequence
- ▶ Connect S2 to BC1
- ▶ Connect S3 to S2
- ▶ Repeat to complete other side
- ▶ Connect S2 to BC2
- ▶ Connect S3 to S2

### STEP 3:




**PARTS REQUIRED:**  
2-TC1, 2-C1, 2-C3, 3-S2, 1-TC2

- ▶ Follow the number sequence
- ▶ Connect S2 to TC1
- ▶ Connect C1 to TC1
- ▶ Connect C3 to C1
- ▶ Connect TC2 to C3
- ▶ Connect C3 to TC2
- ▶ Connect C1 to C3
- ▶ Connect TC1 to C1
- ▶ Connect S2 to TC1
- ▶ Attach the completed upper section to the lower section to complete the frame

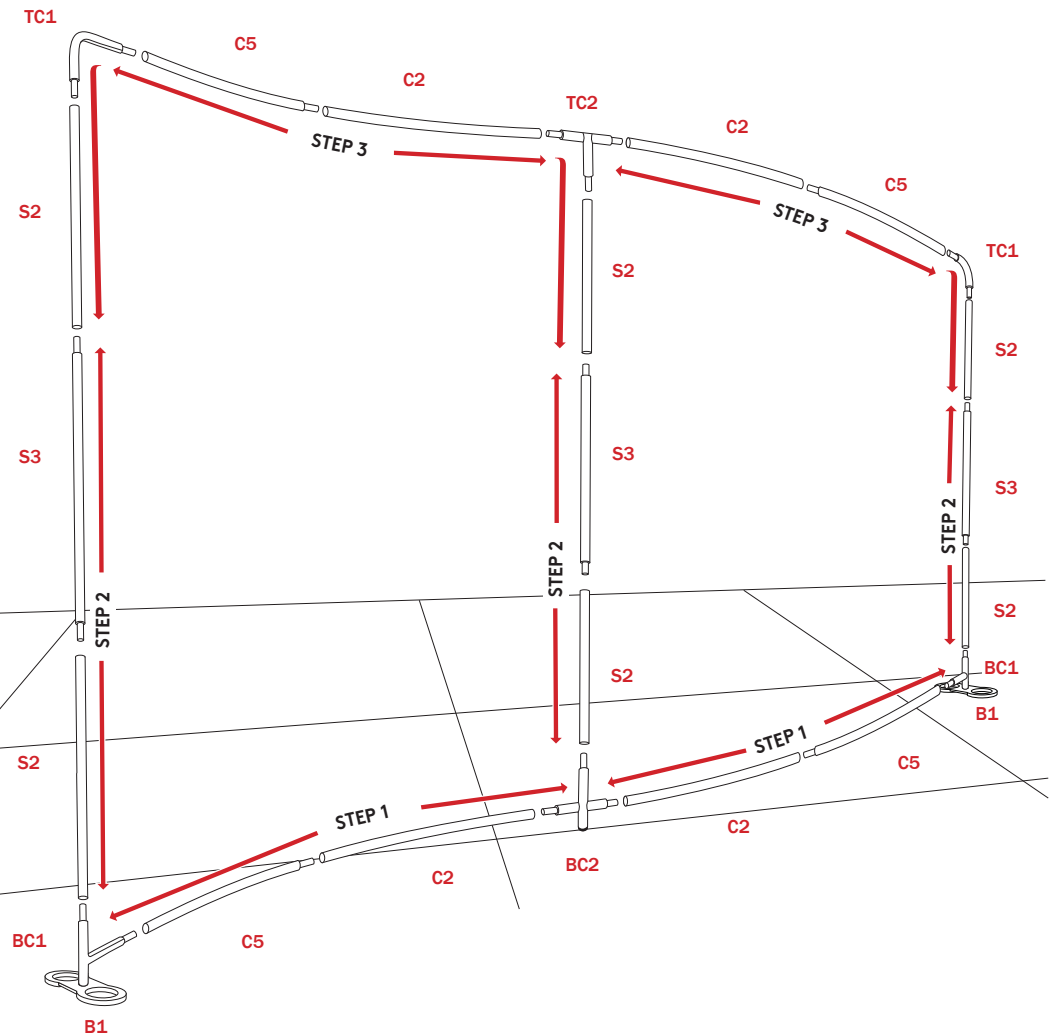

## FABRIC INSTALLATION

- ▶ Make sure that floor is clean. If possible use a drop cloth. Lay frame on the floor
- ▶ Locate the opening on the fabric
- ▶ Make sure that zipper is open
- ▶ Drape fabric like a pillow cover to the frame starting at the top
- ▶ Pull the fabric part way down and stand frame up
- ▶ Pull fabric completely down and close zipper

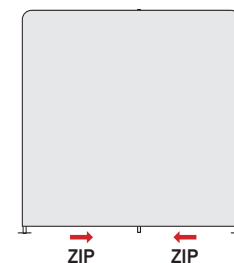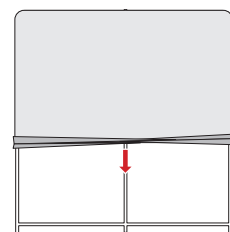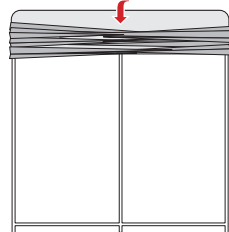

This document contains proprietary information. No portion may be disclosed to other, reproduced or used in any way without our written authorization.

©2018 McRae Imaging Inc.