


## SIZE SPECIFICATIONS:

72"W x 48"H



PARTS	CODE	QTY
	TC1	2
	P1	2
	P2	2
	P3	2
	BC1	2
	B1	2

## FRAME ASSEMBLY

### STEP 1: LOWER SECTION

**PARTS REQUIRED:** 2-BC1, 1-P1, 1-P2, 2-B1

- ▶ Attach the Base B1 to BC1 by pushing and turning until fully inserted
- ▶ Follow the number sequence
- ▶ Connect P2 to BC1
- ▶ Connect P1 to P2
- ▶ Connect P1 to BC1

### STEP 2:


**PARTS REQUIRED:** 2-TC1, 1-P1, 1-P2

- ▶ Follow the number sequence
- ▶ Connect TC1 to P2
- ▶ Connect P2 to P1
- ▶ Connect P1 to TC1

### STEP 3:




**PARTS REQUIRED:** Assembly from Step 1 & 2, 2-P3

- ▶ Connect P3 to TC1
- ▶ Connect P3 to BC1
- ▶ Repeat to complete the other side to complete the frame

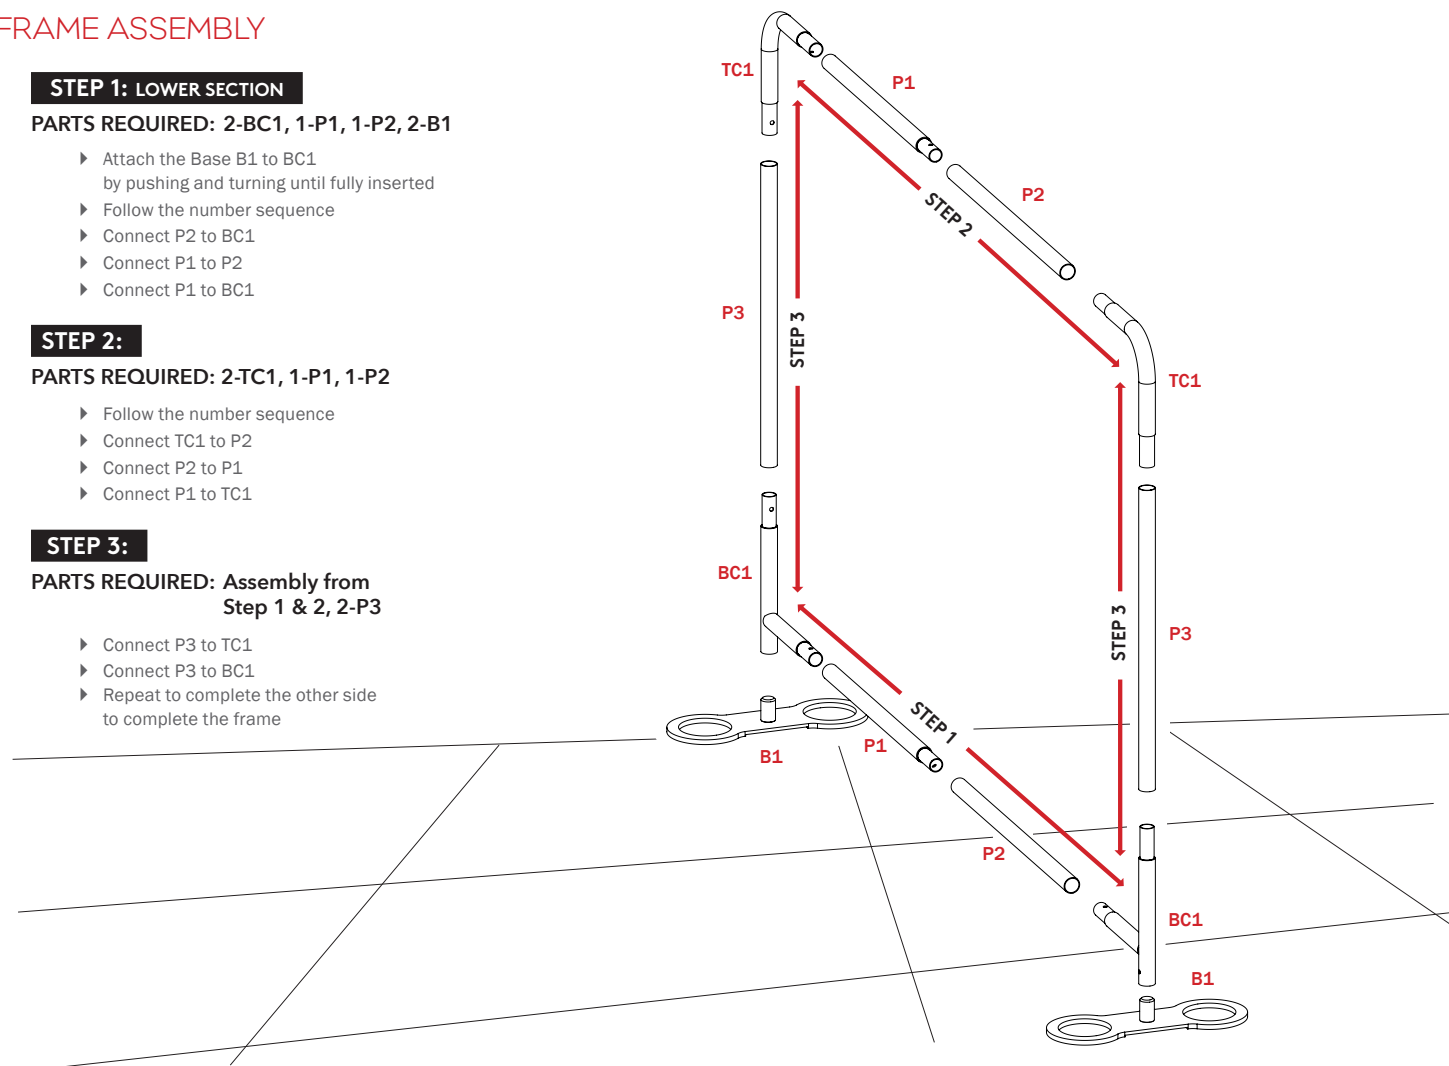

## FABRIC INSTALLATION

- ▶ Make sure that floor is clean. If possible use a drop cloth. Lay frame on the floor
- ▶ Locate the opening on the fabric
- ▶ Make sure that zipper is open
- ▶ Drape fabric like a pillow cover to the frame starting at the top
- ▶ Pull the fabric part way down and stand frame up
- ▶ Pull fabric completely down and close zipper

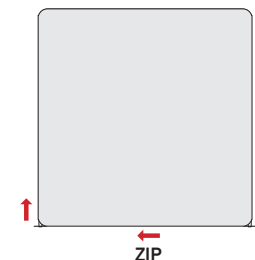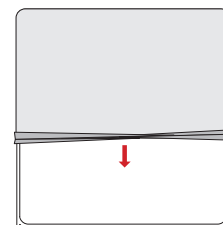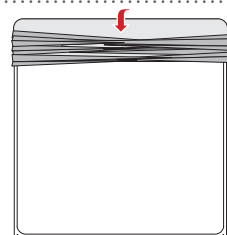

This document contains proprietary information. No portion may be disclosed to other, reproduced or used in any way without our written authorization.

©2018 McRae Imaging Inc.