THIS ASSEMBLY SHEET IS APPLICABLE FOR MCRAE TABLE AND BAR/BISTRO COUNTERS.

FRONT VIEW

TOP VIEW

ISOMETRIC VIEW

PARTS	CODE	QTY
	P1	4
	P2	4
	N1	1
	N2	2
	COUNTERTOP	1

FRAME ASSEMBLY

STEP 1

PARTS REQUIRED: 4 (P1, 2 N2)

- Connect P1 to N2 support bars
- Do the same step for the other support bars

STEP 2

PARTS REQUIRED: 1 (N1)

- Take loosen fasteners from STEP 1
- Connect P1 to N1 support bars

STEP 3

PARTS REQUIRED: 4 (P1)

- Take loosen fasteners from STEP 2
- Connect P1 to N1

STEP 4 (BAR/BISTRO ONLY)

SEE INSTRUCTIONS BELOW

STEP 5

PARTS REQUIRED: COUNTER TOP

- Place counter top in place and screw it with P2 on screw holes from beneath

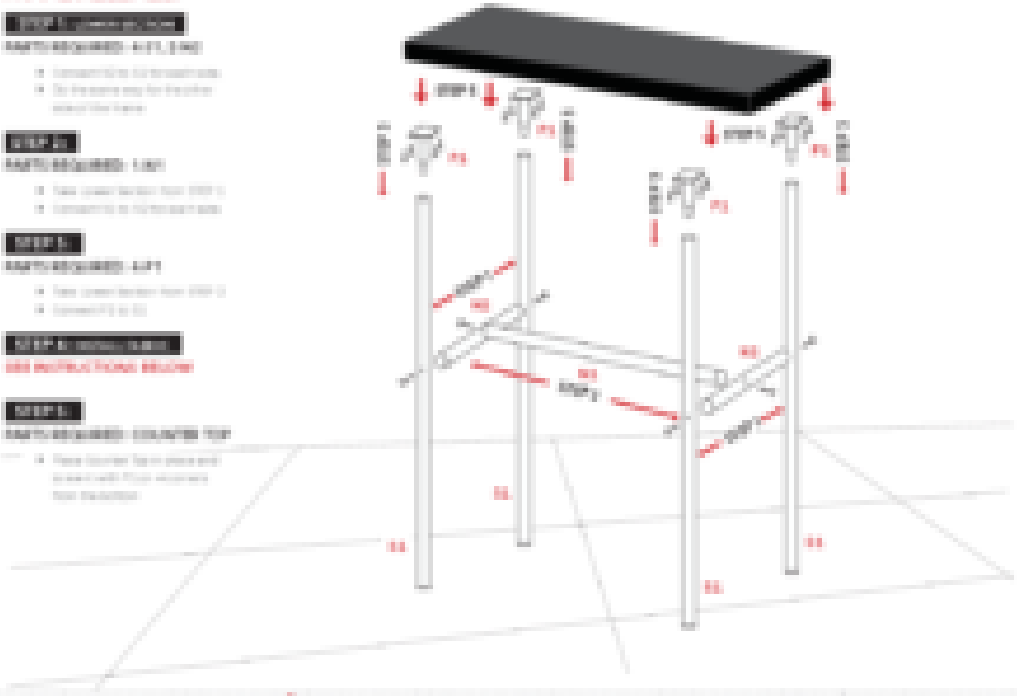

FABRIC INSTALLATION

- Make sure that flaps are open. If possible, use a large room.
- Locate the opening on the fabric.
- Make sure that corners are clear.
- Drape fabric like a pillow over the frame starting at the top.
- Pull the fabric at the top down and away.